



**These Instructions Must be Read by the User Before
Operating the Splitter**

Block, slab & stone splitters

**These instructions must be read by the user before
operating the splitter**

1 The splitter must be operated correctly according to the manufacturer's or owner's operating instructions which are available on request if required.

2 CHECK that all persons and animals are clear of the work area.

3 Wear personal protective equipment; gloves and boots with steel toecaps are usually necessary.

4 Position the machine on firm level ground.

5 CHECK the splitter before use to ensure that all bolts are tight, especially those securing the blade.

6 CHECK that there is adequate workspace around the machine. **DO NOT** allow stone or concrete debris to accumulate in the work area.

7 Only use the cutting blade supplied with the machine.

8 Keep all parts of the body clear during the cutting or splitting operation.

9 When cutting a large block of stone or concrete it may be necessary to support the block to prevent it falling dangerously.

10 DO NOT attempt repairs. Contact the Hire Company.