



These Instructions Must be Read by the User Before Starting the Generator

Fan and Fan heaters must be operated correctly according to the manufacturer's or owner's operating instructions, which are available on request if required

CHECK that all guards are secure. **NEVER** operate the fan or fan heater with missing or defective guards

Take care when positioning the unit, it should be standing on a level surface

DO NOT attempt to move the fan or fan heater unless the power has been switched off

DO NOT place the unit near combustible materials or in a flammable atmosphere

DO NOT block or cover the air intakes or outlets

DO NOT use the unit in the rain or where it may become wet

Some units can be also be used for cooling or ventilation purposes by switching off the heating elements

Switch off and unplug when not using the equipment

WHEN USING ELECTRICAL EQUIPMENT

CHECK that the voltage of the supply is correct. The unit will be either 110 volts or 230 volts

The use of equipment at 110V (CTE) will effectively eliminate the risk of death and greatly reduce the degree of injury from an electric fault

DO NOT use domestic plugs and sockets on construction sites, they are not robust enough

When using 230V units, the risk of injury or death from electric shock is unacceptably high unless the following precautions are taken:

a) Use RCD power breakers at the supply socket to give protection for both

the equipment and its power cable.

b) The RCD should be protected from dust, wet weather, mechanical damage and vibration.

c) Position power cables where they are less likely to be damaged. d) The fan, cables and RCDs should be checked every day (or every shift) using the following as a guide:

- **CHECK** that bare wires are not visible
- Make sure that cables are not damaged and are free from cuts and abrasions (apart from light scuffing)
- **CHECK** that the plug is in good condition, the casing is free from cracks, the pins are not bent or the socket is not blocked with debris or dirt
- **ENSURE** that there are no taped or other non-standard joints in the cable
- **CHECK** that the cable covering has not been pulled out of the grips at the plug or equipment. (The coloured insulation of the internal wires should not be visible)
- **CHECK** the outer casing of the equipment for damage and **CHECK** for loose or missing parts or screws
- Make sure that there are no overheating or burn marks on the plug, cable and equipment
- **CHECK** the operation of the RCD power breaker by operating the test button.

Equipment using 110 volts should be checked weekly as in 13(d) above.

CHECK regularly that all ventilation grills are clear and free from dirt.

If the automatic cut-out operates, allow the motor to cool before re-starting.

DO NOT move the unit by its cable or disconnect a plug by pulling its cable.

DO NOT attempt repairs. Contact the Hire Company.